

**ACL 4000 Flare Stack Ignitor****ACL 4000 Mounting Tee**

The **ACL 4000 Flare Stack Ignitor** is a safe and cost effective means of lighting off all types of flare stacks. It does not require any source of power. The ignitor consists of a piezo ignitor, spark rod, a fuel/air mixer and flame arrestor. To light the stack, simply open the fuel gas valve and allow shot tube to fill with air/fuel mixture then press the ignition button. The flame ignites at the bottom and travels up the stack through a 2" line. Ideal for flare systems with a continuous pilot or manually operated flare stacks.

Aluminum construction
eliminates rusting and corrosion

Venturi barrel for increased
performance

High pressure atmospheric
injector

Piezo ignition

No power required

A removable high temperature
spark plug

Flame arrestor protects operator
from flashbacks

Easy installation